 


# ACC-TENDA-RAILS (SET)


## Instructions

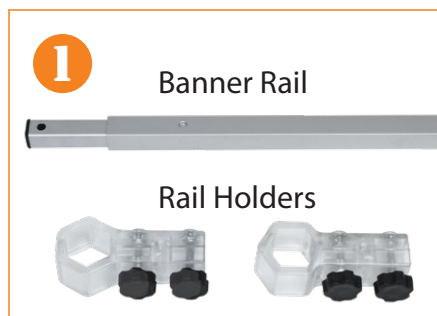

1. Take the Rail & Holders out from the package.



2. Turn the Knobs counter clockwise to open the Rail Holder clamps.

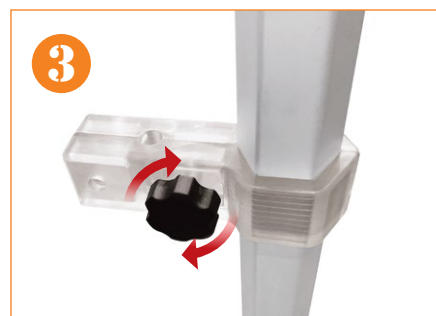

3. Attach the Holder clamps with one Knob to the pole of the Tent in desired height. (For Hexagon shaped frame only)



4. Insert the Banner Rail in to the Holder, make sure the holes are aligned.



5. Secure the Rail with the second knob on the Rail Holder.



6. Insert the half-wall graphics into the Rail, then Repeat steps 3 to 5 on the opposite side to complete the installation.

